


## 38 732 EN0 SKATE COSMOPOLITAN FLUSH PLATE

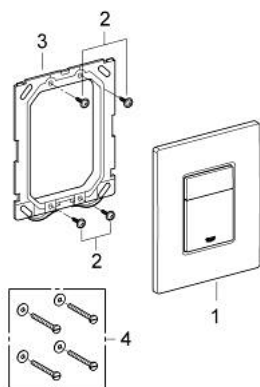

### SPARE PARTS

1: Top plate with push button (Spare part-nr. 42371EN0)

2: Screw (Spare part-nr. 6636200M)

3: Frame (Spare part-nr. 43207000)

4: Fixing set (Spare part-nr. 4308500M)\*

\* Optional accessories